


Euromaid

USER MANUAL

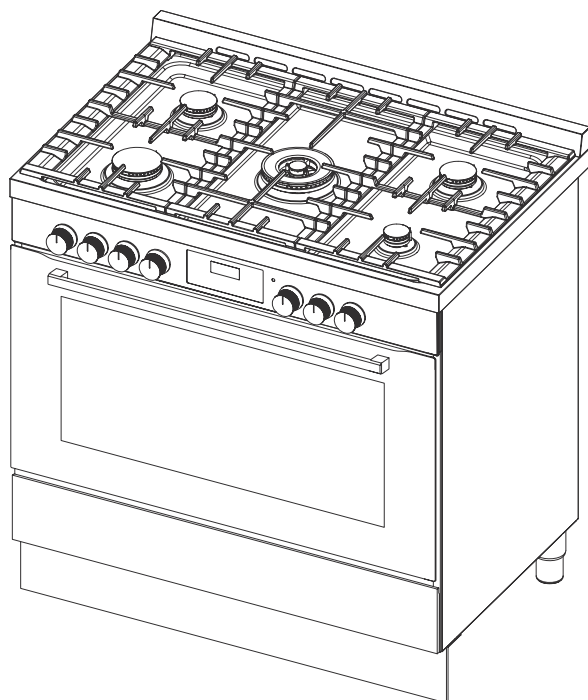

EFS9010DFS

90cm Dual Freestanding Cooker

PLEASE READ THE USER MANUAL CAREFULLY BEFORE USING THE UNIT

Dear Customer,

Congratulations on the purchase of your new product from **Euromaid**.

We recommend you please take some time to read the instruction manual thoroughly to familiarise yourself with the functionality and operations to ensure optimum performance of your new appliance.

After reading the manual, please store it in a safe and accessible location for future reference.

Installation

The installation of your new appliance must be carried out by a qualified installer / technician in accordance to local regulations. Please ensure all packaging materials are disposed of correctly.

Customer Care

Our Customer Care centre is available should you wish to learn more about your appliance in relation to how to use it to its best potential, or tips on cleaning as well as available accessories.

For further details please contact our Customer Care Team

Australia

Ph: 1300 556 816

customer.care.ha@glendimplex.com.au

New Zealand

Ph: 09 274 8265

nztechserv@glendimplex.co.nz

Thank you.

Regards,

Euromaid Australia and New Zealand

CONTENTS

GENERAL INFORMATION

SAFETY INFORMATION 6 - 11

General Warnings	8
Oven Specific Warnings	9
Cooktop Specific Warnings	10
Environment Protection	11

PRODUCT OVERVIEW 12 - 15

Freestanding Cooker	12
Cooktop	13
Control Panel	14
Oven and Accessories	15

INSTALLATION 16 - 32

Dimensions and Installation Features	16
Location of connecting points of gas inlet	17
Freestanding Oven Clearances	18
Combustible Surfaces	20
Important Notes	20
Ventilation	21
Levelling the Feet	21
Fitting the Safety Stabiliser Chain	22
Electrical Connection	24
Connection of the Cable to the Mains	25
Gas Connection	26
Converting to Different Types of Gas	28
Abnormal Operation	31
Burner and Injector Characteristic Table	31

PRODUCT INFORMATION 59

MANUFACTURERS GURANTEE 60 - 62

CONTENTS

OVEN

OVERVIEW 32 - 35

Cooking Modes	33
---------------	----

DAILY USE 36 - 42

Positioning the Oven Trays & Shelves	36
Telescopic Rails	37
How to Use Your Oven	38
Touch Control Digital Timer	39

HINTS & TIPS 43 - 49

Cooking Advice	43
Cooking Guide	46

CLEANING & MAINTENANCE 50 - 53

How to Remove the Oven Door	51
How to Dismantle the Oven Door for Cleaning	52
Replacing the Oven Lamps	53




COOKTOP

OVERVIEW 54 - 56

Gas Burners and Trivets	55
Cookware	56

DAILY USE 57 - 58

Ignition and Operation of the Burners	57
Manual Ignition	57
Use of Gas Burners	58

Icon	Type	Meaning
	Warning	Serious injury or death risk
	Caution	Injury or property damage risk
	Important / note	Operating the system correctly


SAFETY INFORMATION

We recommend that you read the instructions in this owner's manual carefully before use for the best performance and to extend the life of your appliance. It will provide you with all the information you need to ensure its safe installation, use and maintenance. Retain this owner's manual for future reference.

When handling the appliance, we recommend you always use the handles recessed into the sides of the oven to prevent personal injury or damage to the appliance.

To maintain the efficiency and safety of this appliance, we recommend that you do the following:

- Always call the Glen Dimplex service department if there are any faults with your appliance.
- Always use original spare parts available from Glen Dimplex.
- This appliance is designed for non-commercial, household use and it must not be altered in any way.

 **Warning!** This appliance is a domestic kitchen appliance suitable for indoor installation. It is not suitable for outdoor installations such as alfresco kitchens or garages unless a qualified, competent installer has deemed the location and installation to be suitable & compliant.

- This appliance can only be used safely when it is correctly connected to an efficient earthing system in compliance with current electrical safety standards.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- During use, the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

 **Warning!** Accessible parts will become hot when in use.

- To avoid burns and scalds, children should be kept away.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use a steam cleaner to clean the appliance.

SAFETY INFORMATION

Packaging items such as plastic bags, polystyrene, nails, etc. are potentially dangerous, and therefore appropriate measures must be taken to prevent children and the disabled from coming into contact with them.

Avoid the following:

- Touching the appliance with wet parts of the body.
- Using the appliance while barefoot.
- Improper or dangerous operation.
- Obstructing the ventilation or heat dissipation slots.
- Allowing power supply cables of other appliances to come into contact with hot parts of the oven.
- Exposing the appliance to atmospheric agents such as rain, or direct sunlight.
- Using the oven for storage purposes.
- Using flammable liquids near the appliance.

Authorised personnel must be contracted to:

- Install the appliance according to these installation instructions and any local requirements.
- Replace the temperature probe if it is damaged. The probe is part of thermostat. Only use the temperature sensing probe recommended for this oven.

Glen Dimplex Service Department must be contacted:

- If in doubt about the operation of the appliance.
- If in doubt about the soundness of the appliance after removing it from its packaging.
- If the power supply cable has been damaged or needs to be replaced.
- If the appliance requires a service.
- If you need spare parts.

SAFETY INFORMATION

General Warnings

- ⚠ **Warning!** Do not steam clean the oven.
- ⚠ **Warning!** Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- ⚠ **Warning!** Do not install the appliance behind a decorative door in order to avoid overheating.
- ⚠ **Warning!** Only use the appliance to cook food and nothing else.
- ⚠ **Warning!** Check that the appliance has not been damaged immediately after it has been unpacked.
- ⚠ **Warning!** Disconnect the appliance from the electrical mains if it is not functioning properly and before cleaning or performing maintenance.
- ⚠ **Warning!** When left unused for a long period, unplug the appliance from the electricity mains.
- ⚠ **Warning!** Use oven gloves to place cookware in the oven or when removing it.
- ⚠ **Warning!** Always grip the oven door handle in the centre.
- ⚠ **Warning!** Make sure the knobs are in the **off** position when the appliance is not in use.
- ⚠ **Warning!** Glen Dimplex will not accept any liability as a result of any damage due to incorrect installation or improper use.
- ⚠ **Caution!** Do not touch hot surfaces. The heating elements and other accessible parts including inside the oven cavity and on the cooktop become extremely hot during operation and can cause burns on contact. Take care when handling the food you are cooking to avoid touching hot parts inadvertently. Keep young children well away when using the appliance.
- ⚠ **Warning!** Do not spray aerosols in the vicinity of this appliance while it is in operation. Do not store or use flammable liquids or items in the vicinity of this appliance.
- ⚠ **Warning!** Do not use or store flammable materials in the appliance storage drawer or near this appliance.

SAFETY INFORMATION

- ⚠ **Warning!** Do not modify this appliance.
- ⚠ **Warning!** Do not use this appliance as a space heater.
- ⚠ **Warning!** Please ensure the appliance is secured using the safety stabilising chain, as per the installation instructions.
- ⚠ **Warning!** Do not attempt to lift or move the oven by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.
- ⚠ **Warning!** This appliance is not suitable for use with aftermarket lids or covers.

Oven Specific Warnings

- ⚠ **Warning!** Do not place heavy objects on the oven door. Do not lean on the oven door when it is open, as this can damage the door hinges.
- ⚠ **Warning!** Keep the oven door closed when using the grill function.
- ⚠ **Warning!** During cooking, never place pans, trays or other cookware directly onto the bottom of your oven, including any dishes with water or ice. Always place them on the shelves provided.
- ⚠ **Warning!** When removing the baking/drip tray or rack from the hot oven, always use an oven mitt.
- ⚠ **Warning!** Do not use aluminium foil to cover the grill pan or heat items wrapped in aluminium foil under the grill. The high reflectivity of the foil could potentially damage the grill element. You should also never line the base of your oven with aluminium foil. The trapped heat can irreversibly damage the enamel and may even cause a fire.
- ⚠ **Warning!** Do not line the oven with foil or place anything on the bottom of the oven while baking to avoid permanent damage, as trapped heat will crack or damage the enamel floor of the oven cavity.
- ⚠ **Warning!** Do not attempt to lift or move the oven by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.

SAFETY INFORMATION


- ⚠ **Warning!** Never use the storage compartment at the base of the Cooker for storing any flammable items or objects that cannot withstand heat (including but not limited to timber, paper, spray cans, rags, etc).
- ⚠ **Warning!** Use all of the oven functions with the oven door closed.
- ⚠ **Warning!** Do not use plastic wrap or wax paper in the oven.
- ⚠ **Warning!** For food safety reasons, do not leave food in the oven for longer than two hours before and after cooking or defrosting. This is to avoid contamination by organisms which may cause food poisoning. Take particular care during warmer weather. In the event of power failure while cooking, return the oven dials in off position to prevent overheating of the appliance.
- ⚠ **Caution!** Opening the door. Be careful when opening the oven door to avoid contact with hot parts of the oven and steam.

Cooktop Specific Warnings

- ⚠ **Warning!** Do not allow pots to boil dry, as damage to heating elements or the hob itself may result.
- ⚠ **Warning!** Do not operate cooktop heating elements without a pot, fry pan, etc.
- ⚠ **Warning!** Do not use pots or pans with unstable or deformed bases to avoid an accident.
- ⚠ **Warning!** Do not allow cookware to overhang the hob onto adjacent bench tops as this may cause scorching to the bench top surface.
- ⚠ **Warning!** After a burner is extinguished, turn the control knob to the off position and wait at least one minute before relighting the burner.

SAFETY INFORMATION

Environment Protection

The appliance shall not be discarded together with the urban refuse and rubbish. The materials used on this appliance marked by the symbol  are recyclable.



The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more details information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.


Packaging Materials

The materials with the symbol are recyclable.

Dispose the packaging in a suitable collection containers to recycle it.

PRODUCT OVERVIEW

Freestanding Cooker

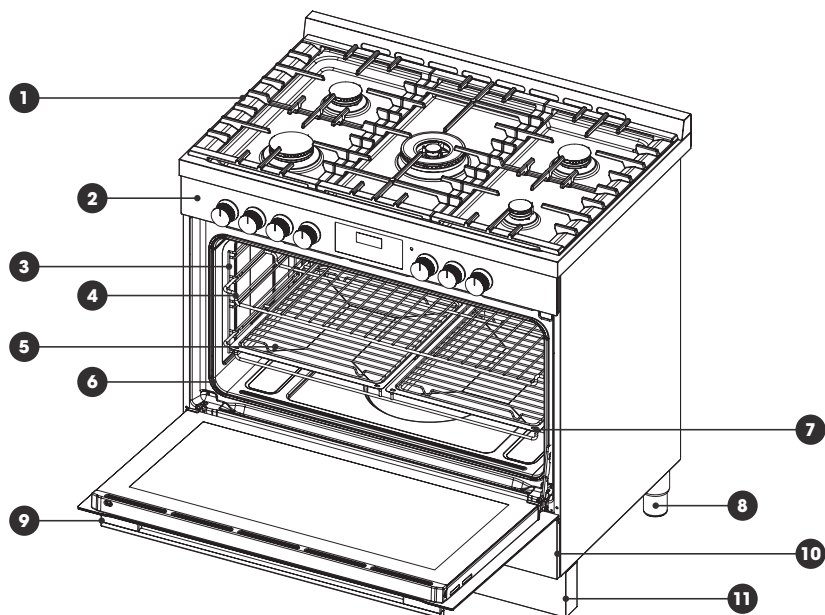

① Cooktop

② Control panel

③ Side racks

④ Chrome wire shelf

⑤ Grill insert

⑥ Door seal

⑦ 2x baking trays and holder

⑧ Adjustable legs

⑨ Oven handle


⑩ Storage drawer

⑪ Kick panel

① **Note:** Above picture is for reference only. The actual appliance may be slightly different.

PRODUCT OVERVIEW





Cooktop

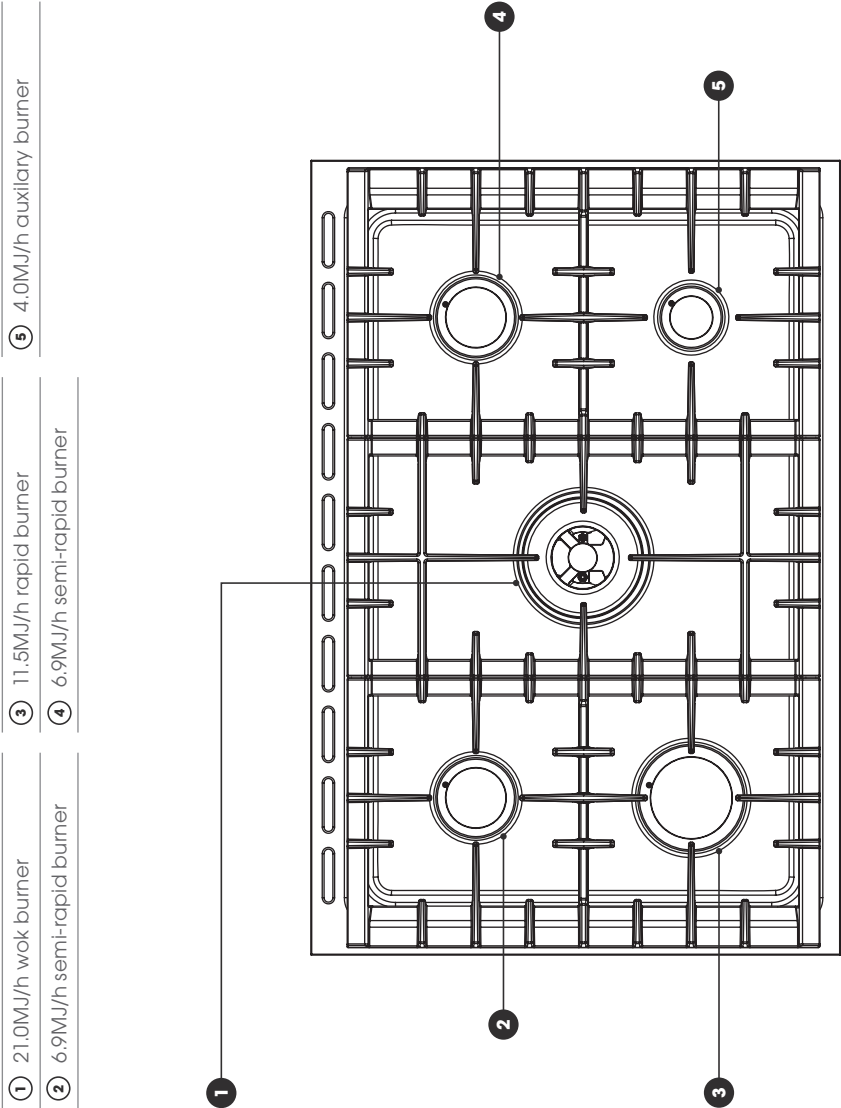

PRODUCT OVERVIEW

Control Panel

- ① Burner temperature selection knob
- ② Cooking mode selection knob
- ③ Touch programmable timer / clock
- ④ Cooking temperature selection knob
- ⑤ Burner temperature selection knob (printed on the knob collar)
- ⑥ Cooking mode selections (printed on the knob collar)
- ⑦ Cooking temperature selections (printed on the knob collar)


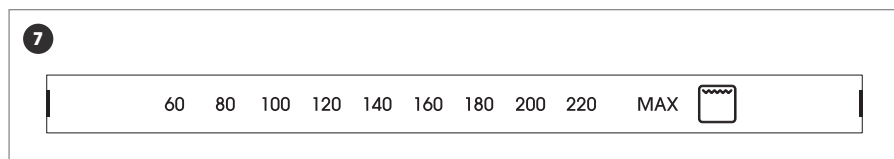
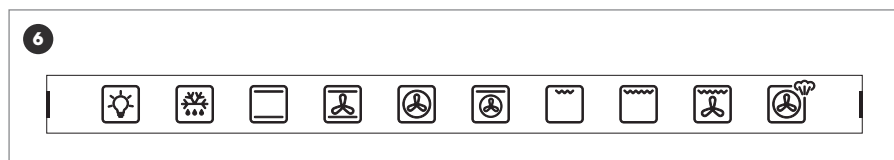
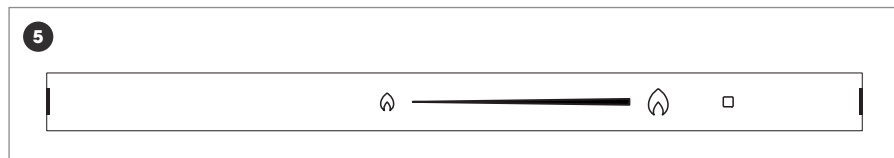
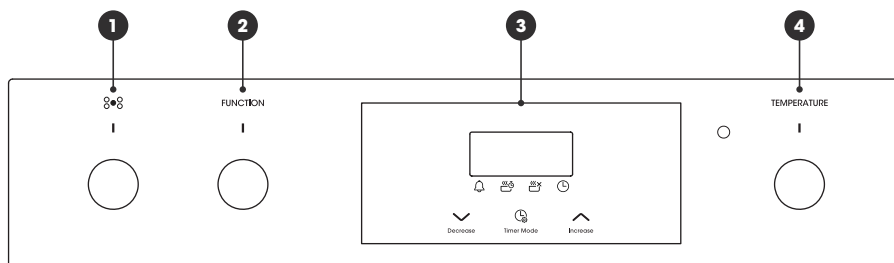


PRODUCT OVERVIEW


Oven and Accessories

There are five shelf positions in the oven. The oven is supplied with:

- | | |
|---------------------------------|---------------------------|
| ① 2x chrome wire shelf supports | ④ 2x grill inserts |
| ② 2x split baking trays | ⑤ 1x set telescopic rails |
| ③ 1x baking tray holder | |

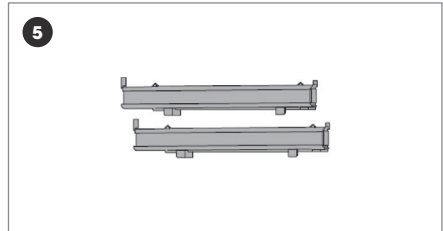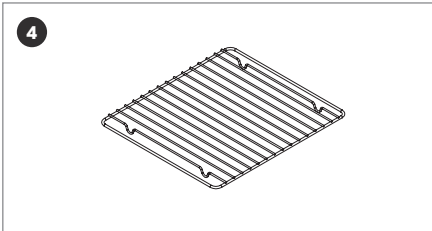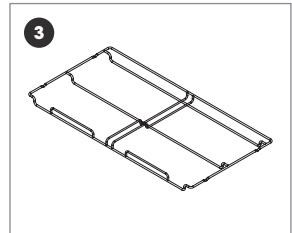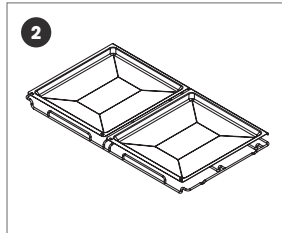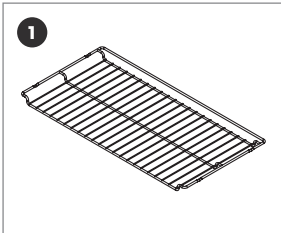

Shelf positions / levels

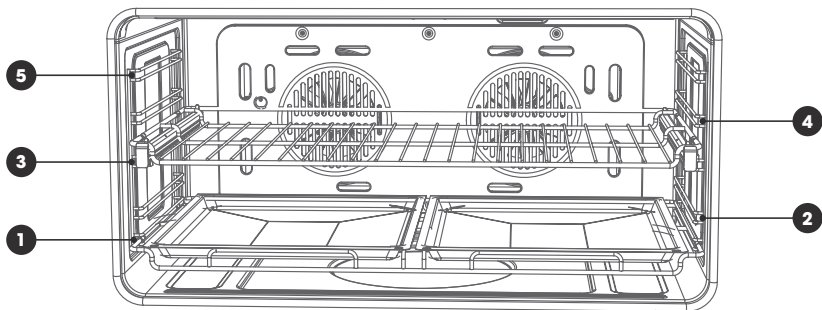

INSTALLATION

Dimensions and Installation Features


⚠ **Warning!** Prior to installation, ensure that the local distribution conditions and the adjustment of the appliance are compatible;

The adjustment conditions for this appliance are stated on data plate;

This appliance is not connected to a combustion products evacuation device.

It shall be installed and connected in accordance with current installation regulations.

Particular attention shall be given to the relevant requirements regarding ventilation.

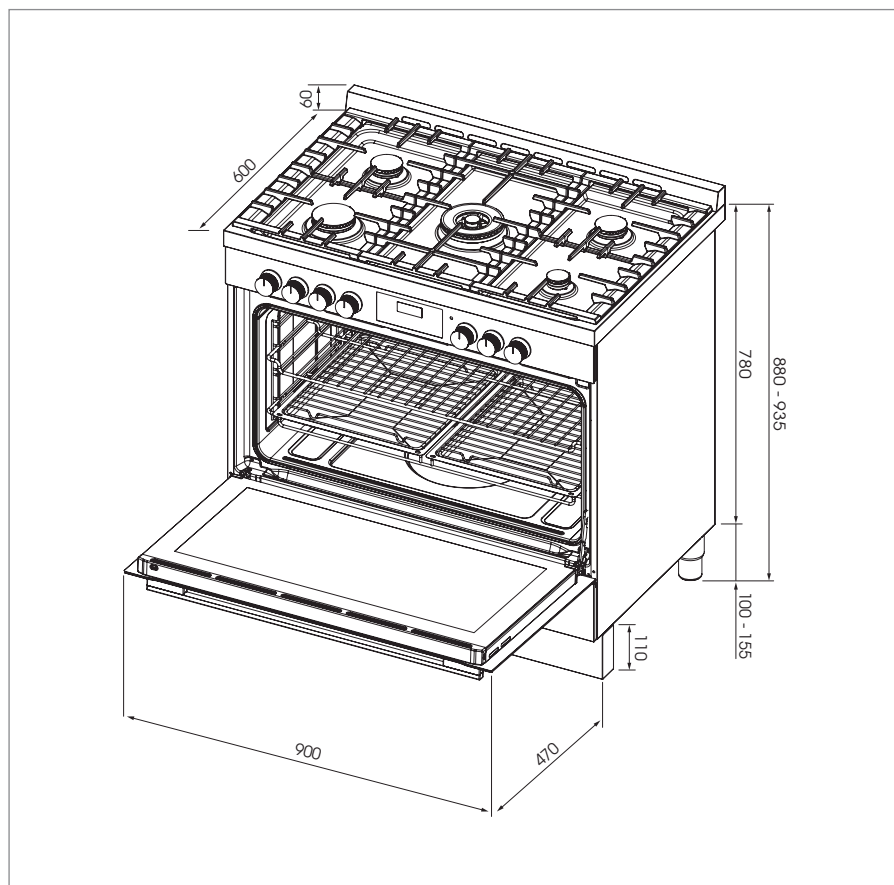


INSTALLATION

Product dimensions		mm
A)	Overall width of the freestanding oven	900
B)	Overall height of the freestanding oven (from the floor to top of the cooktop, excluding the optional backguard)	880 - 935
C)	Overall depth of the freestanding oven (excluding handles and knobs)	600
D)	Height of the freestanding oven chassis (excluding the adjustable legs)	780
E)	Depth of the open door to the front of the freestanding oven	470


Location of connecting points of gas inlet

59.1mm from side panel of cooker and 770-820mm to the ground according to the height of the adjustable legs.

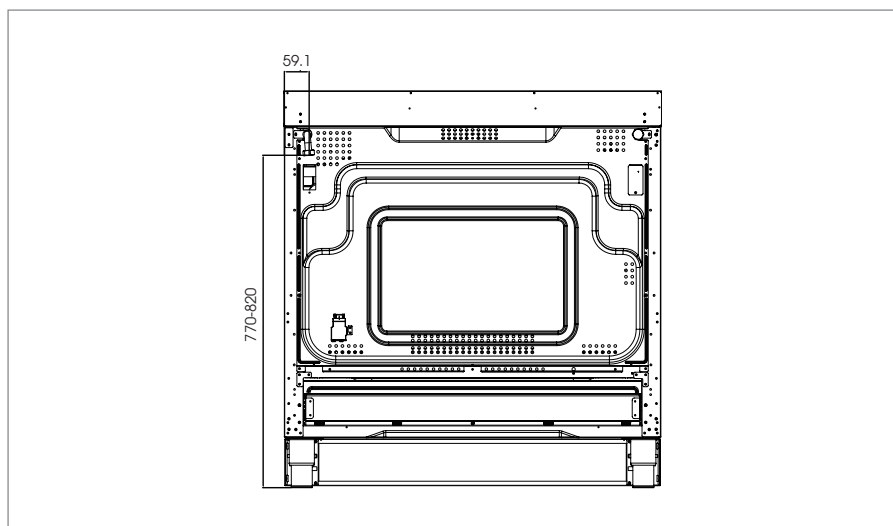

INSTALLATION

Freestanding Oven Clearances

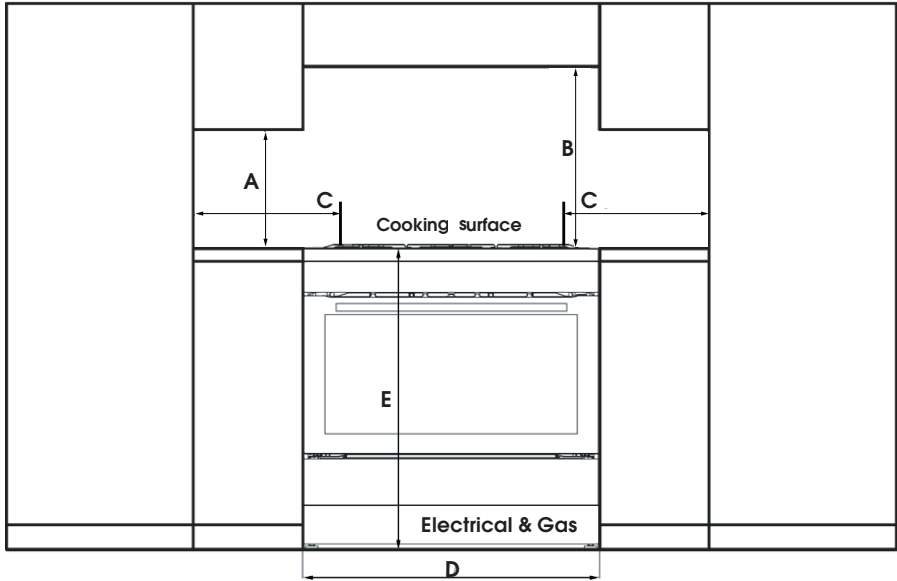

Product dimensions		mm
A)	Minimum vertical distance between benchtop and cabinet extending above the counter	450
B) Minimum clearance from the top of the burner cap (cooking surface) to:	New installation: overhead cabinet centered above from the top of the trivet	650
	Replacement: overhead cabinet centered above from the top of the burner	600
	Overhead cabinet centered above the cooktop (non-combustible / protected)*	450
	Minimum clearance from the top of the trivet (cooking surface) to rangehood	650
	Minimum clearance from the top of the trivet (cooking surface) to exhaust fan	750

INSTALLATION

Product dimensions		mm
C)	Minimum clearance from the edge of any burner to the nearest combustible surface*	200
D)	Width of cabinetry opening	900
E)	Maximum height of cabinetry immediately adjacent to the freestanding oven (from floor to countertop)**	935
F)	Maximum depth from wall to cabinetry face	600


**Installation clearances and protection of combustible surfaces shall comply with the current local regulations e.g. AS/NZS5601.1 (latest edition) Gas Installations code. The standards above specify that where required protection shall ensure that the surface temperature of the combustible surface does not exceed 65°C above room temperature.*


***Depending on the height of the leg adjustment. The cooking surface must sit flush or above countertop level.*


INSTALLATION

Combustible Surfaces

- This appliance shall be installed in accordance with AS/NZS 5601 Gas Installations. Required Clearances around Domestic Cooking Appliances.
- Any adjoining wall surface situated within 200mm from the edge of any burner must be a suitable non-combustible material for a height of 150mm for the entire length of the appliance. Any combustible construction above the appliance must be at least 650mm above the top of the trivet and no construction shall be within 450mm above the top of the trivet. Zero clearance is permitted on the side and rear adjoining surfaces below the maintop.
- If the bench-top is situated within 200mm from the edge of any burner, it should be 10mm or more below the hob as shown above.
- Install Range Hoods in accordance with manufacturer's instructions, no closer than 650mm above the maintop for Range Hoods and 750mm for Exhaust Fans.

 **Warning!** This appliance shall be installed in accordance with the local regulations and only used in a well-ventilated space, in accordance with the specified Installation Clearances.

 **Warning!** The use of a gas cooking appliance results in the production of heat and moisture in the room. Ensure that the kitchen is well ventilated with a rangehood (mechanical extractor hood).

 **Warning!** Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.

Important Notes

Overhead clearances

In no case shall the clearances between the highest part of the cooker be less than 650mm or for an overhead exhaust fan 750 mm. All other downward facing combustible surfaces less than 650 mm above the cooker surface shall be protected for the full width of the cooking surface in accordance with the standards noted above. In no case shall the clearance be less than 450 mm.

Rear and side clearances

- Where the dimensions from the periphery of the nearest burner to any vertical combustible surface is less than 200 mm the surface shall be protected

INSTALLATION

in accordance with the standards to a height of not less than 150 mm above the cooking surface for the full width or depth of the cooking surface.

- Where the dimensions from the periphery of the nearest burner to any horizontal combustible surface is less than 200 mm, the horizontal surface shall be greater than 10 mm below the surface of the hob, or the horizontal surface requirement above.
- Do not install the range near flammable materials such as curtains.

Installing the range on a plinth


- The freestanding oven can be installed on a plinth without the adjustable legs fitted.
- Ensure the freestanding oven is secure and provide safety measures to keep it in place.
- Cabinetry dimensions can be adjusted to suit the plinth height, see product dimensions for chassis height.

Ventilation

In general, the appliance should have adequate ventilation to maintain temperature of immediate surroundings within safe limits.

Levelling the Feet

The height and level of the appliance can be adjusted by rotating the feet located underneath the appliance at each corner. Rotate the feet to decrease or increase the height.

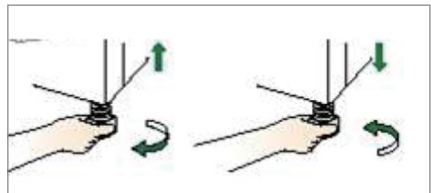


INSTALLATION

Fitting the Safety Stabiliser Chain

The cooker is supplied with an anti-tilting chain to prevent the appliance from tilting forward and accidental damage to the gas pipe.

A Fitting the chain

- ① Take the expansion hook and make an adequate hole in the wall behind, at the same height as the chain fixing area. Insert the plug into the hole and then screw in the hook until it is firmly fixed to the wall.
- ② Fix the chain to the hook.
- ③ Adjust to level of the cooker inserting the feet provided.

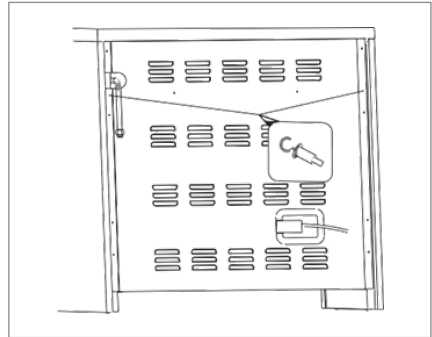

INSTALLATION

B If you can't fit the chain

For a situation where the appliance is between two cupboards and the anti tilt chain cannot be fitted we suggest securing by screwing both sides of the cupboards into the sides of the cooker. The screws should be fitted as follows:

- ① Position the oven between the cupboards in it's final position, then mark the location of the pilot hole inside the cupboard. Refer to the diagram below for the location of the pilot hole.
 - ② Use 3.5mm diameter drill bit to drill the pilot hole through the cupboard and both sides of the cooker. Before drilling, check your measurements to ensure the pilot holes are located within the range specified in the diagram.
 - ③ Fix two 12 gauge x 40mm long self tapping screws through the pilot holes inside both cupboards and into the side of the cooker.
-
- ① **Note:** A drilled hole in the side of the cooker which is outside the range specified may void the warrantee. Inspect cupboards thoroughly before drilling to avoid damage to electrical wires or gas lines.
 - ① **Note:** Screw length is based on cupboard thickness of 20mm, gap between cupboard and oven of 10mm. Screw length could vary depending on cupboard material thickness and gap between oven and cupboards.
 - ① **Note:** The screws must be accessible for removal if the cooker requires service. Cupboards must not be built over these screws.

Equipment type: Freestanding (class 1)


Insulation class: Class 1

⚠ Warning! The manufacturer declines any and all responsibilities for damages to things or injuries to persons or animals deriving from incorrect installation or use of the equipment.


INSTALLATION

Electrical Connection

The appliance is fitted with an approved 15 Amp flexible cord and plug which must be connected to a correctly earthed socket outlet. The manufacturer is not liable for any direct or indirect damage caused by faulty installation or connection. It is therefore necessary that all installation and connection operations are carried out by qualified personnel complying with the local and general regulations in force.

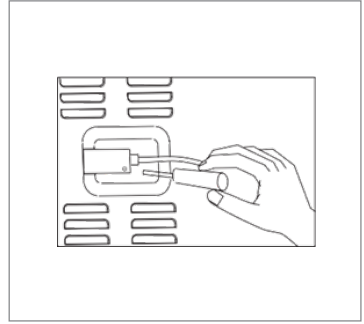

- ① **Note:** The wire section on the cable must not be less than 1.5mm² (3×1.5 cable).
- ① **Note:** Use only the special cables available at our service centers.

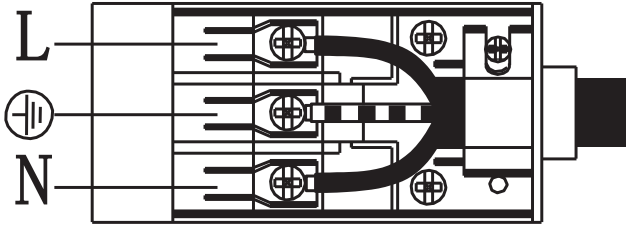

INSTALLATION


Connection of the Cable to the Mains

Connect the feeding cable to a plug suitable for the load indicated on the rating plate of the product. In case of a direct connection to the mains (cable without plug), it is necessary to insert a suitable omnipolar switch before the appliance, with minimum opening between contacts of 3mm (the grounding wire should not be interrupted by the switch). Before connecting to the mains, make sure that:

- The electrical counter, the safety valve, the feeding line and the socket are adequate to withstand the maximum load required (see rating plate).
- The supply system is regularly grounded, according to the regulations in force. The socket or the omnipolar switch can easily be reached after the installation of the oven.
- After carrying out the connection to the mains, check that the supplying cable does not come into contact with parts subject to heating.
- Never use reductions, shunts, adaptors which can cause overheating or burning.

The manufacturer is not liable for any direct or indirect damage caused by faulty installation or connection. It is therefore necessary that all installation and connection operations are carried out by qualified personnel complying with the local and general regulations in force.

Electrical features	Watt
Oven light	25
Upper heating element	1600
Bottom heating element	1500
Grill heating element	2600
Circular heating element	2000
Ventilator motor	18
Cooling fan	18

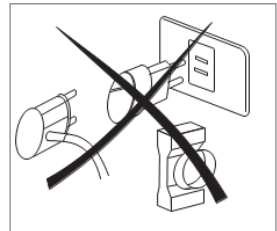

- ① **Note:** This appliance shall be installed only by authorised persons and in accordance with the manufacturer's installation instructions, local as fitting regulations, municipal building codes, electrical wiring regulations, local water supply regulations.

INSTALLATION

Gas Connection

The appliance must be connected to the gas supply or the cylinder according to the specifications of the standards and after checking that it is adjusted for the type of gas available.

The gas connection is male 1/2" BSP and is situated 55mm from the right and 560mm from the floor.

The cooker can be connected with a Flexible Hose, which complies with AS/NZS 1869 (Australian Approved), 10mm ID, class B or D, between 1 - 1.2m long and in accordance with AS/NZS 5601 for a high level connection.

There are two ways to carry out the connection to the main gas line:

A The cooker can be connected with the cuprum material.

- ① Loosen the tie-in down and connect one terminal of the pipe with the gas elbow between 1 - 1.2m long. The hose should not be subjected to abrasion, kinking or permanent deformation and should be able to be inspected along its entire length. Unions compatible with the hose fittings must be used and connections tested for gas leaks.
- ② The flexible tube shall be fitted in such a way that it cannot come into contact with a moveable part of the surrounding cabinetry (e.g. a drawer) and does not pass through any space susceptible of becoming congested.
- ③ The fixed consumer piping outlet should be at approximately the same height as the cooker connection point, pointing downwards and approximately 150mm to the side of the cooker.
- ④ The hose should be clear of the floor when the cooker is in the installed position.
- ⑤ Fix one end of the chain on the screw next to the gas inlet connection and the other end should be anchored to the floor/wall so that the chain prevents strain on the hose connections when the cooker is pulled forward.

INSTALLATION

B The appliance is factory set for natural gas.

- ① The test point pressure should be adjusted to 1.0kPa with the triple ring burner operating at maximum.
- ② The appliance is set up to operate with the gas specified on the gas type label placed on the back of the appliance.

To perform these operations the qualified installer will follow the indications given in the **adaptation to the various types of gas section**.

For safer operation make sure that the supply pressure respects the values given in the **table of burner and injector characteristics**. If installing for use with LPG gas, ensure a gas regulator suitable for a supply pressure of 2.75kPa is part of the gas tank supply and the test point pressure is adjusted to 2.75kPa.


- ⚠ **Warning!** Once the appliance has been installed, make sure that the gas pipe is neither squashed or damaged by moving parts.
- ⚠ **Warning!** Before leaving, check all connections for gas leaks with soap and water.
- ⚠ **Warning!** DO NOT use a naked flame for detecting leaks. Ignite all burners both individually and separately to ensure correct operation of gas valves, burners and ignition. Turn gas taps to low flame position and observe stability of the flame for each burner individually and separately. When satisfied with the operation of the cooker, please instruct the user on the correct method of operation. In case the appliance fails to operate correctly after all checks have been carried out, refer to an authorised service provider in your area.

INSTALLATION

Converting to Different Types of Gas

Please ensure that installation with Australian Approved NG Regulator supplied in this kit. The test point pressure must be adjusted to 1.0kPa with the largest burner operating on maximum flame.

ULPG (The appliance test point is located at the injector) Gas pressure must be checked to confirm the appliance operating pressure is 2.75kPa, test point is Auxiliary burner injector as shown below.

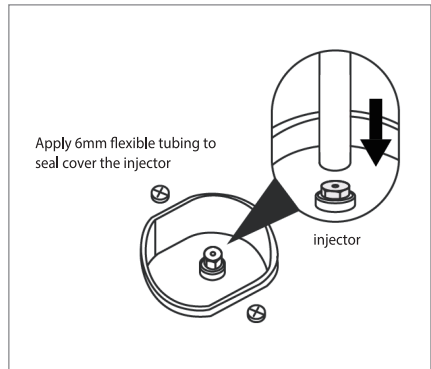

- ① Disconnect power.
- ② Light the Semi-Rapid burner and set to high flame. Ensure all other burners are off.
- ③ Zero manometer, then apply flexible tubing to seal over the Auxiliary burner injector, hold securely in place and check the gas pressure by pressing in the corresponding burner control knob in, then turning to high flame position.
- ④ If the pressure is 2.75kPa, reassemble the burner and perform the final checks as per this instruction.
- ⑤ If the pressure is not 2.75kPa, disconnect the appliance and check or adjust or replace the LPG cylinder regulators as appropriate in accordance with AS/NZS 5601.


When converting from Natural Gas to Universal LPG ensure that the NG regulator is removed.

An Australian Approved gas regulator suitable for a supply pressure of 2.75kPa should be part of the gas tank supply and the test point pressure must be adjusted to 2.75kPa.

INSTALLATION

To change the appliance to a gas different from that for which it was set up, **see gas type label** and proceed as follows:

- ① Remove the trivets.
- ② Remove the burners caps and burner heads.
- ③ With a 7mm socket spanner unscrew and remove the injectors.
- ④ Replace the injectors with those supplied corresponding to the gas available, see **burner and injector characteristics table**.
- ⑤ Replace the various parts proceeding in reverse.

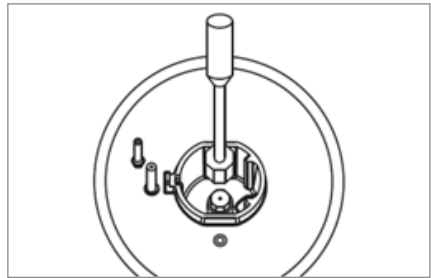

When converting from Natural Gas to LPG ensure that the NG regulator is removed and replaced with the Test Point Assembly. A gas regulator suitable for a supply pressure of 2.75kPa should be part of the gas tank supply and the test point pressure should be adjusted to the pressure according to the data plate.

Setting the minimum flame

The flame on the small output is regulated by the factory.


When the injectors have been replaced or there are special mains pressure conditions, it may be necessary to regulate the minimum flame again. The operations necessary to set the minimum flame are as following:

- ① Light the burner.
- ② Turn the knob to the minimum position.
- ③ Take out the knob (and gasket if there is one).

INSTALLATION

LPG to NG

- ① Use a thin blade screwdriver to turn the by-pass screw located above left of the gas valve, shaft as shown right.
- ② Gently turn the by-pass screw clockwise to the end completely then turn it anti-clockwise until the turndown is a small, stable flame which is uniform around the entire burner ring. If not, adjust the by-pass screw until satisfied with the flame.

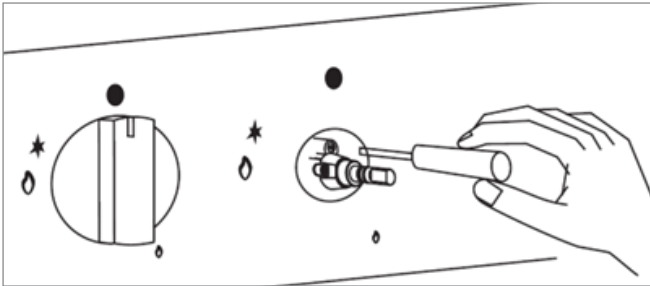

NG to LPG

- ① Use a thin blade screwdriver to turn the by-pass screw located above left of the gas valve shaft. Gently turn the by-pass screw clockwise until the turndown is a small, stable flame which is uniform around the entire burner ring. If not, adjust the by-pass screw until satisfied with the flame,
- ① **Note:** For burners with a safety valve make sure that the regulation obtained is sufficient to maintain heating of the thermocouple. If it is not, increase the minimum.
- ① **Note:** The burners require no regulation of the primary air.

INSTALLATION

Abnormal Operation

Any of the following are abnormal operation and may require servicing:

- Yellow tipping of the hob burner flame.
- Sooting of cooking utensils.
- Burners not igniting properly.
- Burners failing to remain alight.
- Burners extinguished by oven door.
- Gas valves, which are difficult to turn.


In the case the appliances fails to operate correctly, contact an authorized service provider in your area

Burner and Injector Characteristic Table

Consumption			
Universal LPG			
Burner	Bypass (mm)	Input (MJ/h)	Main Injector (mm)
Rapid	0.44	11.0	0.88
Semi-rapid	0.34	6.6	0.71
Auxiliary	0.29	4.5	0.57
Wok	0.64	19.0	1.18
Test point pressure		2.75kPa	

Consumption			
Natural Gas			
Burner	Bypass (mm)	Input (MJ/h)	Main Injector (mm)
Rapid	0.44	11.5	1.55
Semi-rapid	0.34	6.9	1.16
Auxiliary	0.29	4.0	0.88
Wok	0.64	21.0	2.15
Test point pressure		1.0kPa	

OVERVIEW

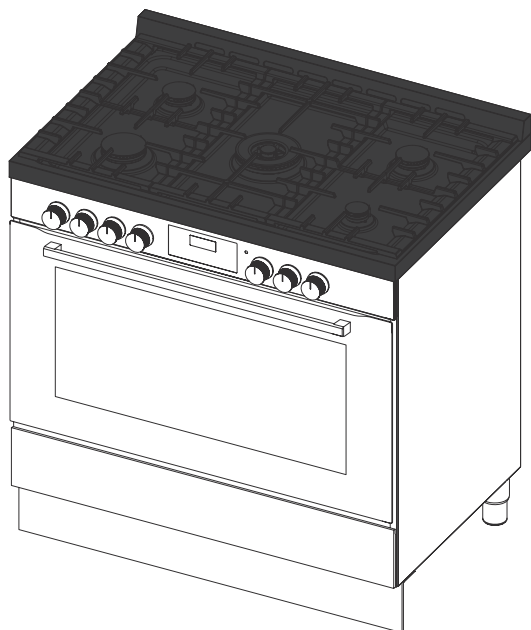**OVERVIEW****32 - 35****DAILY USE****36 - 42****HINTS & TIPS****43 - 49****CLEANING & MAINTENANCE****50 - 53**

OVERVIEW

Cooking Modes



Grill

Directs radiant heat from the powerful upper element onto the food. The **grill** function is best suited for cooking different cuts of meat such as steak, chops, sausages and fish, or for making toasted sandwiches and other quick-cooking foods. For the best results, allow the grill to preheat for 3 minutes before placing food inside. This will help to seal in the natural juices and maintain tenderness of meats. **Always grill with the oven door closed.**



Maxi Grill

Directs radiant heat from the 2 powerful upper elements onto the food.

Maxi grill allows you to use the full size of the grill tray for cooking larger meals, and will cook faster than the **grill** function.

Maxi grill is best suited for cooking different cuts of meat such as steak, chops, sausages and fish, or for making toasted sandwiches and other quick-cooking foods. For the best results, allow the grill to preheat for 3 minutes before placing food inside. This will help to seal in the natural juices and maintain tenderness of meats. **Always use maxi grill with the oven door closed.**



Fan Grill

Generates heat from the upper element which is circulated throughout the cavity by the fan. This combination helps to distribute the heat more evenly onto the food, which helps to avoid burning or overcooking.

The **fan grill** function is ideal for larger cuts of meat which require longer cooking times and will achieve results similar to **rotisserie** cooked meat. **Use the fan grill function with the oven door closed.**



Bake

The oven is heated using two elements, one located at the top of the cavity and the other below the floor of the oven. This traditional baking function achieves the best results when cooking on a single oven shelf, to ensure even heat distribution to the food. It is ideal for cooking single trays of biscuits, muffins, cakes and roasts.

OVERVIEW



Fan Assist

The oven is heated using two elements, one located at the top of the cavity and the other below the floor of the oven. The fan circulates the hot air around the cavity for better heat distribution, allowing you to place food in different positions in the oven to cook at the same time. It is suggested to use a maximum of two shelves with the **fan assist** function and avoid using the bottom shelf to prevent overcooking the base. Food placed on the upper shelf will cook more quickly than the lower shelf.



Rapid Cook

Heat is generated by the upper and fan elements to heat the oven quickly, while the fan distributes the hot air evenly throughout the cavity. This allows you to preheat your oven up to 25% quicker than with standard **bake**.

The **rapid cook** function is ideal for oven frying your favourite frozen food such as chips, wedges, nuggets and other similar foods, achieving extra crispy results.



Fan Forced

Uses the rear element surrounding the fan to generate heat. The fan then circulates the hot air to maintain a consistent temperature throughout the oven cavity. This allows you to cook food in different areas of the oven at the same time. **Fan forced** is a very versatile cooking function which can be used for most types of cooking and baking, and will cook foods faster and at a lower temperature than standard **bake** functions.



Defrost

Uses the fan to circulate room temperature air around the cavity. This function helps to defrost (thaw) different kinds of food before cooking. Using the **defrost** function will reduce defrosting times by up to 50%.



Light

Turns on only the oven light, the light remains on when the oven is operating.

OVERVIEW




Easy Steam / Steam assisted cooking

Cooking with steam is a great addition to regular **hot air** or **fan forced** cooking functions. Steam helps to bring out the natural flavours of food, cooking it more evenly and retaining more nutrients and goodness. Steam assisting cooking functions, such as Euromaid easy steam, consistently produce juicy, succulent interiors with crispy, golden finishes.


- ⚠ **Warning!** Risk of burns or damage to the appliance.
- ⚠ **Warning!** Do not open the oven door when the Easy Steam function is in operation, except when preheating.
- ⚠ **Warning!** Open the oven door carefully once the steam function has completed.

How to use

- ① Open the oven door.
- ② Add 150ml of water to the well on the base of the cavity while oven is cold.
- ③ Turn the function knob to **easy steam mode** .
- ④ Turn the temperature knob to select the cooking temperature between **220** and **Max**.
- ⑤ Pre heat for 10 minutes or until the oven has reached the set temperature.
- ⑥ Place food into the oven and cook as per recipe suggestions.

- ⚠ **Caution!** Do not refill cavity well with water during cooking or while oven is hot.



- ⑦ To turn off the oven, turn the function control knob to the 12 o'clock position.
- ⑧ Once the oven is cool, wipe away any excess water from the cavity well.

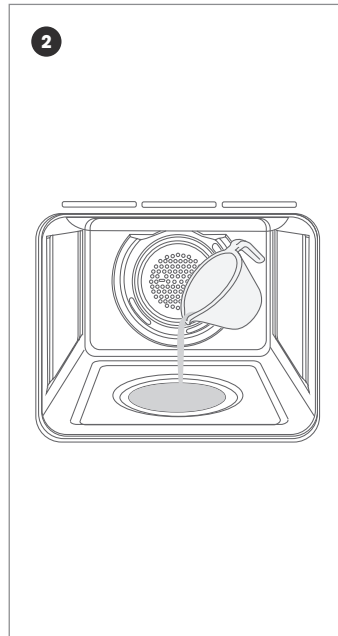

DAILY USE

Positioning the Oven Trays & Shelves

- The Grill Tray or Oven Shelf can be located in any of the five height positions in the oven. Refer to the **cooking guide table** for the recommended shelf position. When fitting the trays or shelves, ensure they are fitted between the two wires that are closest together as shown below.
 - Oven Shelves have a stop so that they are not fully withdrawn by accident. To fully remove the oven shelves, lift the front of the shelf slightly and withdraw fully from the oven.
- ① **Note:** that the Grill Tray does not have a stop position and can be fully withdrawn without interruption, so be careful not to accidentally fully withdraw the tray.
- Fit trays and shelves between bars as shown below.
 - To remove the oven shelf support, push down on the wire below the top locking pin, pull away from the oven wall until you can release the top of the support from the holes in the oven wall. Replace in reverse procedure.

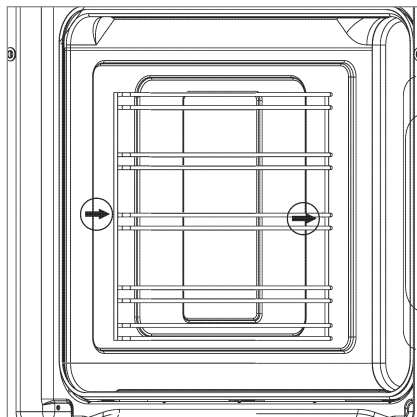
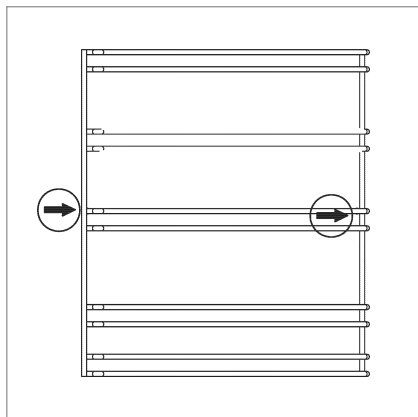


DAILY USE

Telescopic Rails

The oven includes a set of fully-extending telescopic rails which can be positioned on different shelf levels, allowing the oven racks, trays and Air Fry basket to slide in and out effortlessly.

- ① To un-clip the telescopic rail for cleaning or repositioning purposes you must apply outward pressure on the underside of the telescopic rail to release. (Note: reverse of rail shown).
- ② To re-fit the telescopic rail, locate the clip into the top rail on the shelf guide and push downward, the rail will clip into place.
- ③ The telescopic rail is designed to support either a shelf or grill / baking tray and can be installed on any of the shelf positions.

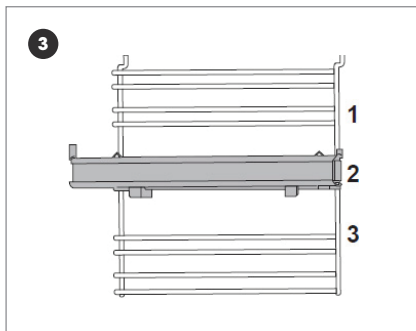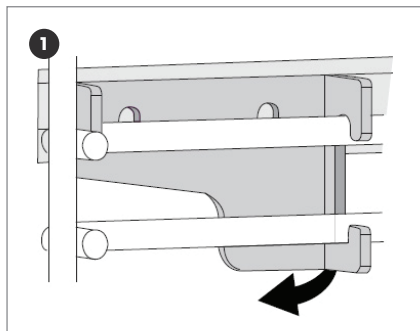

DAILY USE

How to Use Your Oven

This fan forced oven is an extremely versatile appliance that allows you to choose easily and safely between different cooking modes. The various cooking modes are selected by means of a cooking mode selection knob, located on the control panel.


To operate the oven

- Turn the cooking mode selection knob to the desired cooking mode (explanation of cooking modes is on pages 33 to 35).
- Turn the cooking temperature selection knob to the desired temperature (cooking guide is on page 46 to 49) or to **Max** if Grilling.
- The first time you use your appliance, we recommend that you set the thermostat to the highest setting, set the cooking mode selection knob to a cooking mode and leave the oven on for about half an hour with nothing in it and the oven door closed. Then, open the oven door and allow the oven to cool. Any odour that may be detected during this initial use is due to the evaporation of substances used to protect the oven during storage.

- ① **Note:** Place tray on the bottom shelf position of the oven to prevent any spillages from dripping onto the bottom of the oven. Never place anything (including foil and oven trays) on the bottom of the oven when it is in operation because this could damage the enamel. Only place your cookware (dishes, trays, aluminum foil, etc.) on the oven shelves provided with the appliance.

DAILY USE

Touch Control Digital Timer

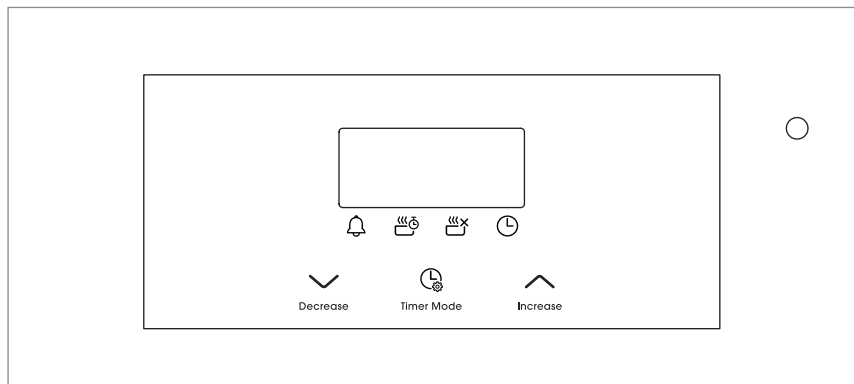



Button functions	
	Decrease time
	Increase time
	Timer mode
	Timer
	Set cooking time (<i>amount of time to cook</i>)
	End cooking time (<i>end time for cooking</i>)
	Set the time




DAILY USE

This model has a digital display, 24hr clock with 3 control buttons. When the power is connected, the screen displays **12:00** and the bar above the  symbol flashes.

 
 
Setting the time when power is first connected

- To set the correct time, press the  or  button to advance forward or backward until the correct time is displayed. After 5 seconds the time will be locked in.

Adjusting the time









- Press the function button repeatedly until the bar above  flashes, then press  or  button to set the time. After 5 seconds the time will be locked in.



Manual operation setting

  - When power is first connected, the oven will be in manual operation as soon as the time is set. Manual operation will only be cancelled if the power to the oven is switched off or if an automatic cooking time is selected and the bar above  or  is flashing. See next section on **automatic setting**.



Automatic setting

    - Automatic setting of the oven allows you to select the end time, cooking time, temperature and cooking mode. The oven will switch on, cook according to the selected cooking mode and temperature and then switch off automatically.

- Press the function button repeatedly until the bar above  flashes, then press  or  button to set the time frame for cooking.
 - Press the function button repeatedly until the bar above  flashes, then press  or  button to set the time to switch off.
 - Set cooking temperature and cooking mode by turning the thermostat knob and selector knob.
- After these settings, the bars above  and  will flash, indicating that the automatic cooking feature of the oven is set. **For example:** if cooking time takes 45 minutes and you want it to finish at 14:00:

- Press the function button repeatedly until the bar above  flashes and set the cooking time 45 minutes.
- Press the function button repeatedly until the bar above  flashes and set the finish time to 14:00.

DAILY USE




 

- After the above setting, the current time is displayed and the bars above  and  will flash indicating that the automatic cooking feature is set. When the clock displays 13:15, the oven will start cooking automatically. While cooking the bar will flash.
- When the clock displays 14:00, the oven automatically stops cooking. The alarm will sound and the bar will flash, press any button to stop the alarm.

Semi-automatic setting







There are two methods of semi-automatic cooking:

A Start cooking now and set cooking time

This semi-automatic setting of the oven allows you to start cooking immediately, set the cooking time (up to 10 hours), select the temperature and cooking mode. The oven will cook according to the selected cooking mode and temperature and then switch off automatically once the cooking time has elapsed.





- ① Press the function button repeatedly until the bar above  flashes, then press  or  button to set the time frame for cooking.
- ② Set cooking temperature and cooking mode by turning the thermostat knob and selector knob. The oven starts immediately, the bar above  will flash. After the cooking time has elapsed, the oven automatically stops cooking. The alarm will ring and the bar above  will flash, press any button to stop the alarm.

B Start cooking now and set the finish time

- ① Press the function button repeatedly until the bar above  flashes, then press  or  button to set the time to finish cooking (up to 23 hours and 59 minutes).
- ② Set cooking temperature and cooking mode by turning the thermostat knob and selector knob.
- ③ The oven starts immediately, the bar above  will flash. When the finish time is reached, the oven automatically stops cooking. The alarm will ring and the bar above  will flash, press any button to stop the alarm.
- ④ Press the function button repeatedly until the bar above  flashes, the set cooking time is displayed. If the finish time is set to the current time, the semi-automatic setting will be cancelled.

DAILY USE


Timer

- The digital countdown timer can be set up to 23 hours and 59 minutes maximum.
- To set the timer, press the function button repeatedly until the bar above  flashes. Then press  or  button to set the countdown timer. After 5 seconds, the time will be set and begin to count down. When the set time is reached,  disappears and the alarm will sound, press any button to stop the alarm.

① **Note:** After pressing the function button, timer settings should be done within 5 seconds.

- In case of a power failure, all settings including the time display will be lost. The time and any settings will need to be re-set.

The oven light

- Set the cooking mode selection knob to the  symbol to switch on the oven light(s). The oven light(s) remains on when the oven is operating.

Cooling ventilation

- In order to cool down the exterior of the appliance, this model is equipped with a cooling fan, which switches on automatically.
- When the cooling fan is on, you will notice a flow of air exiting between the oven door and the control panel.


① **Note:** When cooking is finished, the cooling fan continues to operate until the oven cools down and then switches off automatically.

HINTS & TIPS



Cooking Advice

The oven offers a range of settings which allow you to cook any type of food in the best possible way. With time you will learn to make the best use of this versatile cooking appliance and the following directions are only a guideline which may be varied according to your own personal experience.

Preheating

- If the oven needs to be preheated, the **rapid cook mode**  should be selected. This is the most efficient mode, which will reach the desired temperature as quickly as possible using the least amount of energy.
- Once the food has been placed in the oven, the desired cooking mode can then be selected.

Multi shelf cooking




- If you want to cook food on several shelves, select **fan assist mode** .
- When cooking delicate foods on more than one shelf, use the **fan forced mode** . This mode allows you to cook on 3 shelves at the same time. Refer to the **cooking guide** table.

Using the grill

- This multi-function oven has 3 different grilling modes.
- Use the **grill mode** , **maxi grill mode**  or **fan grill mode**  with the oven door closed, place the food on the centre of the grill pan, insert and fit the grill pan on either the 3rd or 4th shelf from the bottom.
- When using **grill mode** , we recommend you set the thermostat to the highest setting.

HINTS & TIPS

Using fan grill

- Use **fan grill mode**  with the oven door closed. This mode is very useful for grilling foods rapidly, as the distribution of heat by the fan makes it possible not only to brown the surface, but also to cook the bottom of the food.
- It can also be used for browning foods at the end of the cooking process, such as adding that gratin finish to pasta bakes for example.
- When using **fan grill mode** , place the food on the 2nd or 3rd oven shelf from the bottom, then place a dripping-pan on the 1st rack from the bottom to prevent fat and grease from dripping onto the oven floor. We recommend you set the thermostat to 180°C, as it is the most efficient temperature for **fan grill mode** .
- However, this does not mean you cannot use other temperatures, simply adjust the thermostat knob to the desired temperature.


- ① **Important!** For best results and to save energy, always use the grill functions with the oven door closed.

Baking cakes

- When baking cakes, always place them in a preheated oven. Make sure you wait until the oven has been preheated thoroughly (the indicator light will turn off). To prevent heat loss and the cake from dropping, do not open the oven door during baking.
- **In general, if pastry is too dry:** increase the temperature by 10°C and reduce the cooking time.
- **If pastry has dropped:** use less liquid or lower the temperature by 10°C.
- **If pastry is too dark on top:** place it on a lower shelf, lower the temperature, and increase the cooking time.
- **If cooked well on the inside but sticky on the outside:** use less liquid, lower the temperature, and increase the cooking time.
- **If the pastry sticks to the pan:** grease the pan well and sprinkle it with a dusting of flour or use greaseproof paper.
- **If I used multi shelf cooking and one shelf is more cooked:** use a lower temperature setting next time. It is not necessary to remove the food from all the racks at the same time.

HINTS & TIPS

Cooking pizza





- For best results when cooking pizza, use the **fan forced mode** .
- Preheat the oven for at least 10 minutes.
- Use a light aluminum pizza pan, placing it on the shelf supplied with the oven. Don't use the dripping pan since this will extend the cooking time, making it difficult to get a crispy crust.
- Do not open the oven door frequently while the pizza is cooking;
- If the pizza has a lot of toppings (three or four), we recommend you add the mozzarella cheese on top halfway through the cooking process.
- For best results, only use one shelf at a time, but if you want to cook on two shelves, use the 2nd and 4th racks from the bottom with a temperature of 220°C and swap them halfway through cooking.

Cooking fish and meat

- When cooking white meat and fish, use a temperature setting from 180°C to 200°C.
- For red meat that you want well done on the outside while tender and juicy in the inside, it is best to start with a high temperature setting (200°C-220°C) for a short time, then turn the oven down afterwards.
- In general, the larger the roast, the lower the temperature setting.
- Place the meat on the centre of the shelf and place the dripping pan beneath it to catch the fat.
- Make sure that the shelf is inserted so that it is in the centre of the oven. If you would like to increase the amount of heat from below, use a lower shelf height.



HINTS & TIPS

Cooking Guide

Foods	Weight (kg)	Cooking position*	Preheat time (min)	Temp. setting	Cooking time (min)
 Defrost					
All frozen food					
 Grill /  Maxi grill					
Soles & cuttlefish	1	4	5	Max	8 - 10
Squid & prawn kebabs	1	4	5	Max	6 - 8
Cod fish	1	4	5	Max	10
Grill vegetables	1	3/4	5	Max	10 - 15
Veal steak	1	4	5	Max	15 - 20
Cutlets	1	4	5	Max	15 - 20
Hamburgers	1	4	5	Max	7 - 10
Mackerels	1	4	5	Max	15 - 20
Toasted sandwiches	-	4	5	Max	2 - 3
 Fan grill					
Grilled chicken	1.5	3	5	200	55 - 60
Cuttlefish	1.5	3	5	200	30 - 35
Pizza (on 2 racks)	1	2 - 4	15	220	15 - 20
Lasagna	1	3	10	200	30 - 35
Lamb	1	2	10	180	50 - 60
Roast chicken + potatoes	1	2 - 4	10	180	60 - 75
Mackerel	1	2	10	180	30 - 35
Plum cake	1	2	10	170	40 - 50



*Rack position from the bottom

HINTS & TIPS

Foods	Weight (kg)	Cooking position*	Preheat time (min)	Temp. setting	Cooking time (min)
 Fan grill <i>(continued)</i>					
Cream puffs <i>(on 2 racks)</i>	0.5	2 - 4	10	190	20 - 25
Biscuits <i>(on 2 racks)</i>	0.5	2 - 4	10	180	10 - 15
Sponge cake <i>(1 cake)</i>	0.5	2	10	170	15 - 20
Sponge cake <i>(2 cakes)</i>	1	2 - 4	10	170	20 - 25
Savory pies	1.5		15	200	25 - 30
 Fan forced					
Tarts	0.5	3	15	180	20 - 30
Fruit cakes	1	2/3	15	180	40 - 45
Fruit cake	0.7	3	15	180	40 - 50
Sponge cake	0.5	3	15	160	25 - 30
Stuffed pancakes <i>(on 2 shelves)</i>	1.2	2 - 4	15	200	30 - 35
Small cakes <i>(on 2 shelves)</i>	0.6	2 - 4	15	190	20 - 25
Cheese puffs <i>(on 2 shelves)</i>	0.4	2 - 4	15	210	15 - 20
Cream puffs <i>(on 3 shelves)</i>	0.7	1 - 3 - 5	15	180	20 - 25
Biscuits <i>(on 3 shelves)</i>	0.7	1 - 3 - 5	15	180	20 - 25
Meringues <i>(on 3 shelves)</i>	0.5	1 - 3 - 5	15	90	180


*Rack position from the bottom

HINTS & TIPS

Foods	Weight (kg)	Cooking position*	Preheat time (min)	Temp. setting	Cooking time (min)
 Bake					
Duck	1	3	15	200	65 - 75
Roast veal or beef	1	3	15	200	70 - 75
Pork roast	1	3	15	200	70 - 80
Biscuits (<i>short pastry</i>)	-	3	15	180	15 - 20
Tarts	1	3	15	180	30 - 35
 Fan assist					
<i>Frozen food</i>					
Pizza	0.3	2	-	250	12
Courgette & prawn pie	0.4	2	-	200	20
Country style spinach pie	0.5	2	-	220	30 - 35
Turnovers	0.3	2	-	200	25
Lasagne	0.5	2	-	200	35
Golden rolls	0.4	2	-	180	25 - 30
Chicken morsel	0.4	2	-	220	15 - 20
<i>Pre-cooked food</i>					
Golden chicken wings	0.4	2	-	200	20 - 25
<i>Fresh food</i>					
Biscuits (<i>short pastry</i>)	0.3	2	-	200	15 - 18
Fruit cake	0.6	2	-	180	45
Cheese puffs	0.2	2	-	210	10 - 12

*Rack position from the bottom

HINTS & TIPS

Foods	Weight (kg)	Cooking position*	Preheat time (min)	Temp. setting	Cooking time (min)
 Rapid cook					
Scotch fillet steak (<i>seared first</i>)	1	3	5	220	8
Frozen chips	1	3	5	220	15
Chicken drumettes / wingettes (<i>with dry rub</i>)	1	3	5	230	15
Fresh barramundi fillet (<i>with crumb</i>)	1	3	5	230	15
Potatoes (<i>cut into wedges</i>)	0.5	3	5	230	14
Frozen food					
Chicken nuggets / crumbed fish	1	3	5	230	15
Smashed chats (<i>parboiled</i>)	1	3	4 - 5	220	15

*Rack position from the bottom

- ① **Note:** Cooking times are approximate and may vary according to personal taste. When cooking using the grill or fan assisted grill, the dripping pan must always be placed on the 1st oven shelf from the bottom.

CLEANING & MAINTENANCE

- Before cleaning your oven or performing maintenance, make sure that the cooking mode selection knob is set to **off** and the cooking temperature selection knob is set to **off**. To extend the life of your oven, it must be cleaned frequently.
- The enamelled or stainless steel parts should be washed with lukewarm water without using any abrasive powders or corrosive substances. If any stainless steel has difficult to remove stains, use cleaners specifically recommended to clean stainless steel. After cleaning any surface, it is advisable to rinse thoroughly and dry.
- The inside of the oven should preferably be cleaned immediately after use, when it is still warm (but not hot), with warm water and soap. The soap should be rinsed away and the interior dried thoroughly. Avoid using abrasive detergents, scourers acidic cleaners such as lime scale remover, etc. as these could damage the enamel. If stains are particularly tough to remove, use cleaners specifically recommended to clean ovens and follow the instructions provided with the cleaner.

① **Important!** Never use a steam cleaner or caustic oven cleaners for cleaning inside the oven.

- If you operate your oven for an extended period of time, or if you are cooking dishes that contain a lot of water, condensation may form on the oven door. Dry it using a soft cloth and try reducing the cooking temperature.
- There is a seal surrounding the oven opening which is necessary to ensure the correct operation of the oven. Check the condition of this seal on a regular basis. If necessary, clean it but avoid using abrasive products or objects to do so. Should it become damaged, please contact Glen Dimplex Service Department. We recommend you avoid using the oven until it has been repaired.

① **Important!** Never place anything (including foil and oven trays) on the bottom of the oven when it is in operation because this could damage the enamel.

- Clean the glass door using non-abrasive products or sponges and dry it with a soft cloth.

① **Important!** Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass. Use only non caustic oven cleaners purchased from hardware stores or supermarkets.

CLEANING & MAINTENANCE

Ignition plug

Automatic burner ignition is provided by a ceramic 'plug' and a metal electrode. Periodically clean these parts of the hob thoroughly. In addition, to avoid ignition difficulties, check that the cavities in the burner are not obstructed. To remove deposits from the burner cavities, remove the burner caps. After cleaning, put the burner heads and caps back together and return them correctly to their position. After washing, replace the pan supports, checking that they are correctly positioned.

How to Remove the Oven Door

You can remove the oven door for better access to the oven when cleaning. Proceed as follows to remove the door:

- ① Open the door fully.
- ② Lift up and turn the latch **A** situated on each of the two hinges.
- ③ Grip the door on the two external sides and close it approximately 3/4 way.
- ④ Pull the door up towards you, lifting it out of the oven frame.
- ⑤ To replace the door, repeat the above steps in reverse order.





CLEANING & MAINTENANCE

How to Dismantle the Oven Door for Cleaning

You can remove the inner door glass for better cleaning.

Proceed as follows to remove the inner door glass:

- ① Remove the cap on top of the door by unscrewing the 2 screws on the left and right sides.
- ② Gently slide out the inner pane of glass.
- ③ Clean the glass with an appropriate cleaner. Dry thoroughly and place on a soft surface.
- ④ Now you can also clean the inside of the outer glass.
- ⑤ Use the reverse procedure to re-assemble the door glass.

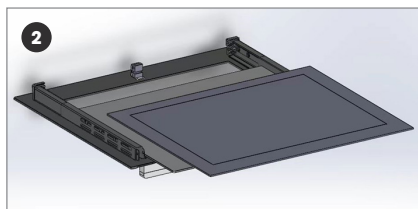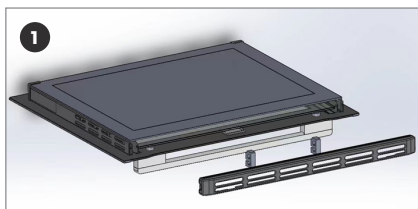

CLEANING & MAINTENANCE

Replacing the Oven Lamps

⚠ **Warning!** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock. Remove the glass cover of the lamp-holder.

Remove the lamp and replace with a lamp resistant to high temperatures (300°C) with the following characteristics:





- Voltage: 220-240V
- Wattage: 25W
- Type: G9

① **Note:** Replacement lamps are available from Glen Dimplex.


Replace the glass cover and reconnect the oven to the mains power supply.

Replacing the side lamp

- ① Remove the side racks.
- ② Take off the protective glass cover.
- ③ Pull the light bulb down to remove it.
- ④ After inserting the new bulb, install the glass cover and side racks back to their original position.

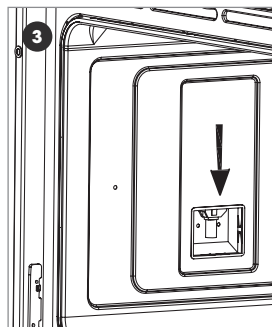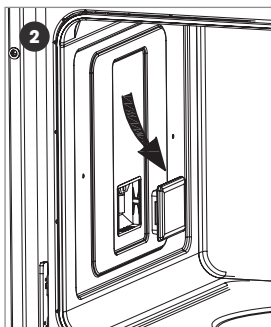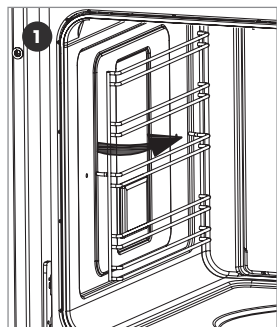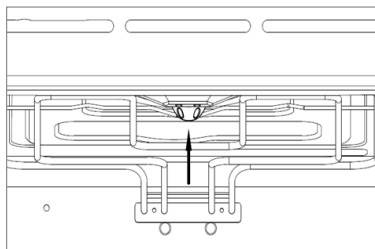

OVERVIEW

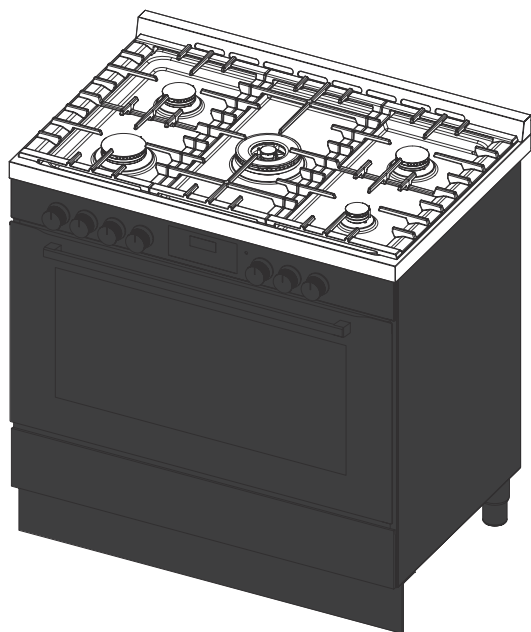

OVERVIEW


54 - 56

DAILY USE

57 - 58

OVERVIEW

Gas Burners and Trivets

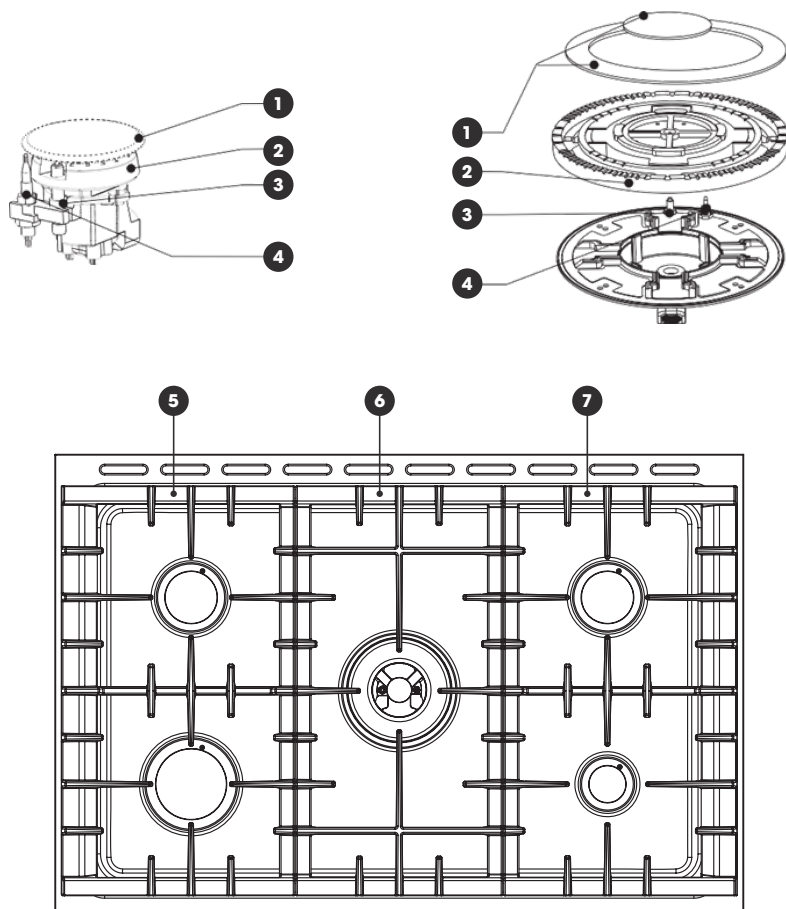

① Burner cap

② Burner head

③ Spark plug

④ Safety valve (for models equipped)

⑤ Left trivet


⑥ Centre trivet

⑦ Right trivet

OVERVIEW

Cookware

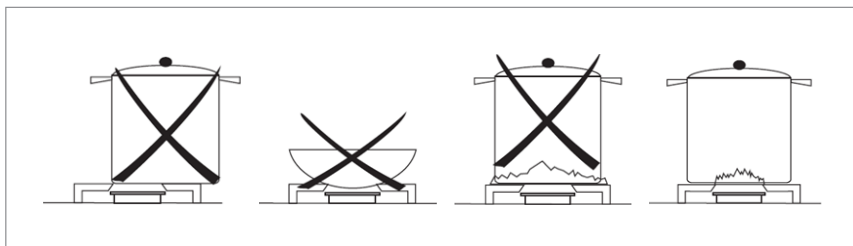


Use cookware with a flat surface, and place centered on the burner.



Burner	Min. cookware size (mm)	Max. cookware size (mm)
Auxiliary	90	160
Semi-rapid	130	180
Rapid	150	260
Wok	210	260


DAILY USE

Ignition and Operation of the Burners

- ① Press and hold the knob while rotating it anti-clockwise, till the index is aligned with the **high flame** .
- ② Once the flame is lit hold the knob in for about 3-4 seconds till the device keeps the burner continuously lit.
- ① **Note:** If the burner fails to ignite, wait one minute for the gas to dissipate before attempting to reignite.
- ③ Once lit, the flame intensity can be adjusted by rotating the knob anti clockwise from the **high flame**  to the **low flame**.
- ④ To turn the burner off, rotate the knob clockwise bringing the index back to the **off position** .

Manual Ignition

In case of electric power failure, carry out the above-described steps and place a gas lighter or a flame near the burner to manually ignite the burner. In this instance pay attention not to burn yourself.

- ① **Note:** The safety valve intervenes in cases of accidental flame failure, blocking the gas delivery (e.g.: air draughts, spillage of liquids, etc.).
- ① **Note:** The ignition device must not be actuated for longer than 15 seconds. Should a flame fail to ignite, or should the burner be accidentally turned off, immediately turn the knob back to the **off position** . Repeat the ignition after one minute at least.

Once the ignition has taken place, adjust the flame according to your needs.

DAILY USE

Use of Gas Burners

For lower gas consumption and a better cooking experience, use cookware with a diameter suitable for the burners, avoiding the flame coming up around the side of the cookware, **see the cookware table**.

- ① As soon as a liquid starts to boil, turn the flame down to a level sufficient to maintain boiling.
- ② During cooking, when using fats and oils, be very careful because if they overheat, they could catch fire.

PRODUCT INFORMATION

Model number(s):	EFS9010DFS (Stainless Steel)
Voltage & frequency:	220 - 240V ~ / 50 - 60Hz
Usable volume:	133L
Total volume:	148L
Output power:	3000 - 3600W
Net weight (kg):	65.0
Gross weight (kg):	80.0
Product dimensions (mm):	900 (w) x 900 - 945 (h) x 600 (d)

MANUFACTURER GUARANTEE

This warranty is provided in Australia by Glen Dimplex Australia Pty Limited ABN 69 118 275 460 (**Phone number 1300 556 816**) and in New Zealand by Glen Dimplex New Zealand Limited NZBN 9429000069823 (**Phone number 09 274 8265**) in respect of the Euromaid product.

1. Euromaid Express Warranty

Subject to the exclusions below, we warrant that the product will not have any electrical or mechanical breakdowns within:

- Ⓐ In the case of **Euromaid** products used for personal, domestic or household purposes, a period of **2 years** from the date the product is purchased as a brand-new product from a retailer located in Australia / New Zealand.
 - Ⓑ The warranty period may be extended by an additional **3 years** (5 years total) if the appliance is registered on the **Euromaid** website (listed below) within 90 days following the date of original purchase.
Australia: euromaid.com.au **New Zealand:** euromaid.co.nz
 - Ⓒ In the case of **Euromaid** products used for purposes other than personal, domestic or household purposes (including business or commercial use), a period of 90 days from the date the product is purchased as a brand-new product from a retailer located in Australia / New Zealand. **Euromaid** products are designed and intended for domestic use only; and
 - Ⓓ All warranty repairs must be carried out by Glen Dimplex or their nominated service agent.
- ① **Note: warranty periods detailed above may vary in line with agreements with select retail and builder partners and may differ between Australia and New Zealand.**

The benefits conferred by this express warranty are in addition to the Consumer Guarantees referred to in section 3 and any other statutory rights you may have under the Australian / New Zealand Consumer Law and/or other applicable laws.

MANUFACTURER GUARANTEE

2. Warranty Exclusions

This express warranty does not apply where:

- Ⓐ The product has been installed, used or operated otherwise than in accordance with the product manual or other similar documentation provided to you with the product;
- Ⓑ The product requires repairs due to damage resulting from accident, misuse, incorrect installation, insect or vermin infestation, improper liquid spillage, cleaning or maintenance, unauthorised modification, use on an incorrect voltage, power surges and dips, voltage supply problems, tampering or unauthorised repairs by any persons, use of defective or incompatible accessories or exposure to abnormally corrosive conditions, events independent of human control which occurred after the goods left the control of Glen Dimplex;
- Ⓒ The repair relates to the replacement of consumable parts such as fuses and bulbs or any other parts of the product which require routine replacement;
- Ⓓ You are unable to provide us with reasonable proof of purchase for the product;
- Ⓔ The breakdown occurs after the expiry of the express warranty period set out in section 1 or;
- Ⓕ The product was not purchased in Australia / New Zealand as a brand-new product.

3. Consumer Guarantees

Our goods come with guarantees that cannot be excluded under the Australian / New Zealand Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

MANUFACTURER GUARANTEE

4. How to Make a Claim

You may make a claim under this warranty through our website, contacting our customer care line or via email. Contact details for Glen Dimplex Australia and New Zealand can be found at the end of this document.

To make a valid claim under this warranty, you must:

- Ⓐ Lodge the claim with us as soon as possible and no later than 14 days after you first become aware of the breakdown;
- Ⓑ Provide us with the product serial number;
- Ⓒ Provide us with reasonable proof of purchase for the product. This can take the form of a store receipt, new home handover form or other payment receipt documentation; and
- Ⓓ If required by us, provide us (or any person nominated by us) with access to the premises at which the product is located at times nominated by us (so that we can inspect the product).

5. Warranty Claims

If you make a valid claim under this warranty and none of the exclusions set out in section 2 apply, we will, at our election, either repair the product or replace the product with a product of identical specification (or where the product is superseded or no longer in stock, with a product of as close a specification as possible).

Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. Products are designed and supplied for normal domestic use. We will not be liable to you under this warranty for business loss or damage of any kind whatsoever.

Contact our Customer Care Team

Glen Dimplex Australia Pty Ltd

Ph: 1300 556 816
customer.care.ha@glendimplex.com.au
www.glendimplex.com.au

Glen Dimplex New Zealand Ltd

Ph: 09 274 8265
nztechserv@glendimplex.co.nz
www.glendimplex.co.nz

READ THE INSTRUCTION BOOKLET BEFORE INSTALLING & USING THE APPLIANCE.

The manufacturer will not be responsible for any damage to property or to persons caused by incorrect installation or improper use of the appliance. The manufacturer is not responsible for any inaccuracies, due to printing or transcription errors, contained in this manual. In addition, the appearance of the figures reported is also purely indicative.

The manufacturer reserves the right to make changes to its products when considered necessary and useful, without affecting the essential safety and operating characteristics. Glen Dimplex constantly seeks ways to improve the specifications and designs of their products. Whilst every effort is made to produce up to date literature, this document should not be regarded as an infallible guide. Actual product only should be used to derive cut out sizes.

All appliances must be installed by a qualified person/s with adherence to the relevant electrical, plumbing and building codes, with compliance being issued as required by state or national legislation.

Additionally, all upright cookers must have the anti-tilt device installed correctly in adherence to the relevant standards by a licenced installer.

For maximum effectiveness and efficiency all rangehoods should be installed with the use of ductwork, by a licenced installer with adherence to the relevant state and national building codes and regulations.

All Glen Dimplex appliances are for Domestic use only, and must be installed by a licenced installer into Domestic Applications only, without exception and to the required Authorities guidelines. Any installation outside of this will **VOID** warranty. Alfresco areas are not a Domestic application.

Euromaid

Distributed by

Glen Dimplex Australia Pty Ltd

Ph: 1300 556 816

customer.care.ha@glendimplex.com.au

www.glendimplex.com.au

Glen Dimplex New Zealand Ltd

Ph: 09 274 8265

nztechserv@glendimplex.co.nz

www.glendimplex.co.nz

For service advice, please contact the Customer Care Centre by phone or email above.

For full terms and conditions, or to register your product warranty, please visit our website.

Euromaid

euromaid.com.au | euromaid.co.nz